

BUSHMASTER™ SI EXPANDED DIAGRAM

- 1. Barrel Assembly
 - 1A. Deluxe Barrel Housing
 - 2. 1/2" Dovetail rail Mount
 - 3. Direct Feed
 - 3A. Direct Feed O'Ring
 - 4. Pita Block (2 screws)
 - 5. Barrel Retention Screw
 - 6. Valve Body Screws (2)
 - 7. Deluxe Barrel Extension
- 8. BUSHMASTER™ SI Pump
 - 9R. Engraved SI Pump Arm
 - 9L. Cut out Pump Arm (not shown)
 - 10. Pump Arm Screws (4)
 - 11. Bolt Knob (2)
 - 12. Delrin Bolt
 - 13. Main Spring
 - 14. Adjustable Hammer Assembly
 - 14A. Sear (Sear Spring & Roll Pin)
 - 14B. Adjustment Screw
 - 14C. Adjustment Tool
- 15. Valve Tube Kit
 - 15A. Valve Tube
 - 15B. Valve Seat
 - 15C. Valve Seat O'Ring
 - 15D. Valve Seal
- 16. Valve Spring
- 20. Quickchange Complete
 - 21. Valve Body
 - 21A. Piercing Pin Adaptor
 - 21B. Piercing Pin Adaptor O'Ring
 - 21C. Piercing Pin Seal
 - 21D. Piercing Pin
 - 22A. Piercing Pin Housing
 - 22B. Pinsleeve
 - 22C. SI Piercing Pin
 - 22D. Sleeve Spring
 - 22E. Face Seal
 - 22F. Sleeve O'Ring
 - 23. Rear Receiver Screw
 - 24. Quickchange Housing
 - 25. Quickchange Lever Assembly
 - 25A. Plunger (1-Roll Pin)
- 26. Link (2-Roll Pin)
- 25C. Lever
- 25D. Pivot Block (Set Screw) (1-Roll Pin)
- 26. Quickchange End Cap (2-Screws)
- 28. Twistchange Housing
- 29. Twistchange Knob
- 30. Air System Adaptor (ASA)
- 31. CO₂ Cylinder Bottle Valve
 - 31A. Nylon O'Ring
 - 32. CO₂ Cylinder Bottle
 - 33. Toe Adaptor
- 40. Complete M-16 Handle Assembly (Complete 45 Handle Assembly Not Shown)
 - 41. Receiver (2 Screws)
 - 42. M-16 Handle & Trigger Housing
 - 43. M-16 Grip (1 Screw)
 - 44. Safety Screw
 - 45. Trigger (1 Dowel Pin, Trigger Spring)
 - 46. Front Receiver Screw
 - 47. Safety (F-Fire S-Safety On)
 - 48. DB109 Screw
 - 49. 45 Handle Frame
 - 50. 45 Grips (2)

