

INSTALLING YOUR NEW INTRUDER(tm) ASSAULT SYSTEM

The Intruder Assault system takes only seconds to install by following these simple directions.

CAUTION: DO NOT remove, attach or service the Intruder Assault while it is under pressure

1. Locate the set-screw on the side of the Expansion Chamber, (just above the bottle adapter).
2. Loosen this screw, using a 9/32 allen wrench. Turn the set screw at least one full turn; be careful not to remove the set screw from the body.
3. Attach the Intruder Assault system to your gun by screwing it into the vertical ASA (adapter) until it has been tightened hand-tight.
4. Hold the main body of the Intruder Assault and turn the bottle adapter portion (lower third of the system), until it is positioned at the desired angle
5. Using the 9/32 allen wrench, tighten the set screw by turning clockwise until the screw is snug. Be sure not to over-tighten this screw.

CAUTION: The Intruder Assault System is a pressure system. Improper use or incorrect assembly can result in potentially dangerous conditions. NEVER attach or detach the Intruder Assault System when a pressure source is connected to the system: ALWAYS remove pressure sources before assembly, disassembly or adjustment. When removing a pressure source from the Intruder Assault, ALWAYS insure that the pressure source valve is turning with the bottle.

If your Intruder Assault System leaks after installation, remove the pressure source. Inspect the system for worn o-rings and make sure that it is correctly attached to the vertical ASA adapter on your gun. If leaks persist, call Pro-Team Products for assistance.

Pro-Team Products: (904) 439-3600