Before Starting


Check the marker and Accessories attached;

X RAP4 marker
X Co2 cylinder (30g/45g rechargeable cylinder)
X Magazine
pack (40rds) of paintball

Spare Parts:

X O-Ring (4140)
X Cleaning Wire
X Screw Driver (wrench)

Accessories: 1 X VCD 1 X Marker Manual 1 X Marker Analysis 1 X Warranty Card

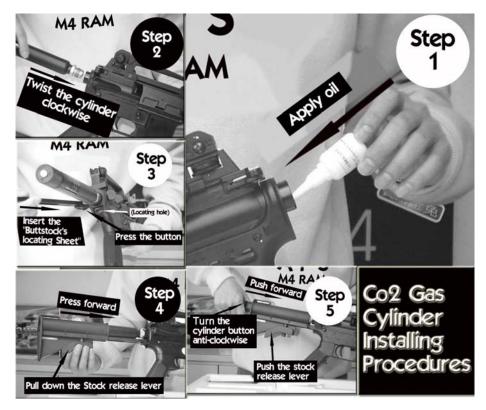

Co2 Cylinder Installing

- 1. Apply 5-7 drops of lubricate oil into the end of the marker body.
- 2. Install the Co2 cylinder into the end of the marker body.
- Press the button on the "Butt Stock's Locating Sheet", and insert it into the hole of the "Locating Hole"
- 4. Pull down the "Stock Release Lever" and slide onto the end of the marker body.
- 5. Turn the Co2 cylinder knob on (anti-clockwise).
 - ** Note: for 30g Co2 cylinder, turn on the cylinder before installing the "Butt Stock"



Paintball Loading Procedures


- 1. Twist the switch (clockwise) on the side of the "M4 Magazine" until it is tight.
- 2. Open the Paintball package and flip up the lid inside the package.
- 3. Insert paintballs into the "M4 Magazine" with the open side facing forward or follow the instructions on the lid



Shooting Procedures

- 1. Insert the "M4 Magazine" form the bottom of the marker
- 2. Pull back the crocking handle to open the "Cartridge Ejection Opening"
- 3. Switch the "Safety Catch" to "AUTO"
- ** Note: There is no "SEMI function"
- 4. Aim and pull the trigger.

Cleaning Procedures

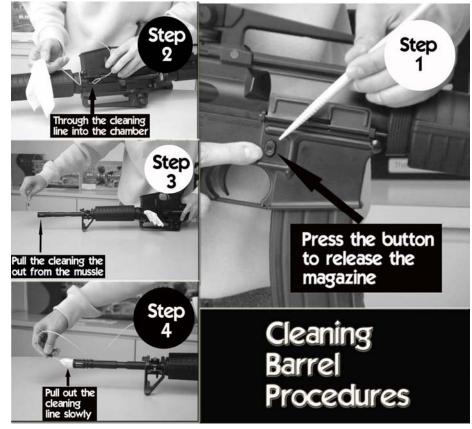

Clean Barrel Procedures

- 1. Press the "Magazine Catch Button" to release the magazine
- Pass one end of the "Cleaning Wire" through the "Cartridge Ejection Opening" to the "Barrel Muzzle" and attach the "Cleaning Cloth" at the other end of the "Cleaning Line"
- 3. Pull the "Cleaning Wire" from the "Barrel Muzzle" slowly
- 4. Repeat this procedure with a clean "Cleaning Cloth" few times as necessary



Cleaning (Water) Barrel Procedures


Cleaning Barrel Procedures (with water)

- 1. Push the two "Locking Pin" out
- 2. Separate the "Upper Marker Body"
- 3. Use water to clean the barrel

After drying the barrel

- 4. Holding the "Cartridge Case Rod" and put the "Upper Marker Body" back on
- 5. Put the two "Locking Pin" in
- ** Note: Make sure to dry the barrel completely after wash

Adjusting Shooting Velocity

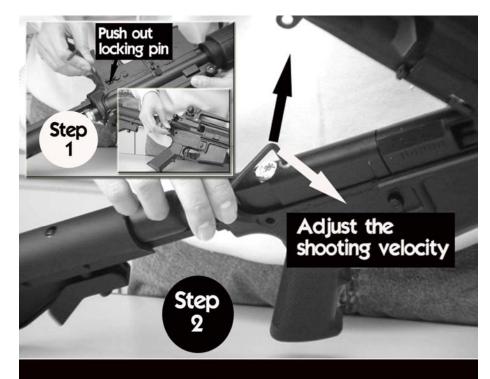

Adjusting Shooting Velocity

Adjusting Shooting Velocity

- 1. Push out the rear "Locking Pin
- 2. Flip up the top of the marker body
- 3. Use the provided tool to adjust the shooting velocity (Anti-clockwise for faster shooting velocity and clockwise for slower shooting velocity)

Barrel Disassembling Procedures




Sparate Barrel Procedures

Note : Reverse this procedure for installing the barrel

Disassembling Barrel Procedures

- 1. Push out the two "Locking Pin" and Separate
- 2. Pull down the "Fore Grip Ring" and pull out the upper and lower "Fore Grip".
- 3. Turn and release the "Fore Grip Ring".
- 4. Unscrew the "Barrel Locking Ring" to loose the Barrel. (covered by the "Fore Grip Ring")
- 5. Pull out the barrel

Core Disassembling Procedures

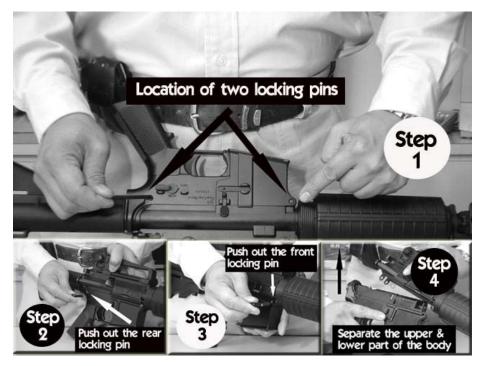

Core Disassembling

- 1. Push the two "Locking Pin" out
- 2. Separate the "Upper Marker Body"
- 3. Disassembling the "Hand Grip" (See "Disassembling Hand Grip" for details)
- 4. Disassembling the "Magazine Catch System" (See "Disassembling Magazine Catch System" for details)
- Disassembling the "Safety Catch System" (See "Disassembling Safety Catch System" for details)
- 6. Separate the "Lower Marker Body"



Disassembling Hand Grip

- 1. Unscrew and take out the "Hand Grip Cover"
- 2. Unscrew the "Fixing Screw" which is located inside the "Hand Grip"
- 3. Pull out the "Hand Grip" slowly



Separate Magazine Release

Disassembling Magazine Catch System

- 1. Unscrew the "Fixing Screw" on the right hand side of the marker body
- 2. Pull out the Magazine Catch button and the Spring
- 3. Pull out the "Magazine Hook" on the other side of the marker body



Separate Safety Catch

Disassembling Safety Catch System

- 1. Unscrew the "Safety Catch Fixing Screw" on the left hand side of the marker body
- Pull out the "Safety Catch" (be careful of the "Spring" and the "Locating Micelle" under the "Safety Catch")
- 3. Pull out the "Locking Pin" on the other side of the marker body

RAP4 Trouble Shooting and Maintenance:

Situation	Reason	Solutions
Not shooting	1. Cylinder is empty	Change cylinder;
during press the	2. Forgot to turn on	Turn on the cylinder;
trigger.	the cylinder	Take off the Magazine
	3. Jammed Paintball	and take out the paintball
	case in the barrel	case;
Shooting distance	1. Maker core is	a. Use the Pressure
is not in the normal	leaking gas	Meter to check the
range		pressure if it is right
		(usually within 20-22
		lb)
		b. Change #4140 O-ring
	2. #4146 is worn out.	Change the #4146
	3. Barrel is loose	Tighten up the #4257
Cartridge can't	#4152 & #4153 is	Change the #4152 &
eject out	broken	#4153

** Suggest that after each use, clean / dry up the barrel and put on some lubricant oil for protection.

** DO NOT store the RAP4 or accessories in a place over $45^\circ\!\mathrm{C}$

For Enquiry please contact: Tel: (408) 727-3144 Fax: (408) 727-3135

Web Site: www.rap4.com

Important Notices

- a. Read the User Manual carefully before using the Marker to avoid any unnecessary accidents or injuries.
- b. Only 18 years old or above to use the Marker.
- c. Failure to follow the instructions may result in serious injury such as blindness and damage to the property.
- d. Wear a protective mask or goggle at all time while using this marker to avoid paints and/or cartridge cases injury to the eyes.
- e. DO NOT point or shoot with the Marker to any persons and yourself, it may cause blindness or other serious injury.
- f. Keep the Gas Cylinder and the Marker away from fire or high temperature area (in excess of 113F or 45° C).
- g. Only use Co2 to fill in the Gas Cylinder to operate the Marker.
- h. DO NOT attempt to strip the Marker and gas cylinder when the gas cylinder is attached.
- i. DO NOT load any pellets other than paintballs in the Marker.
- j. Only suggested paintballs are used for the Marker.
- k. DO NOT carry the Marker without case in the public area.
- 1. DO NOT ship the Marker or accessories except in the original package case.
- m. DO NOT attempt to rebuild or modify the structure of the Marker. It may result in serious injury and damage to the Marker during use.
- n. Remove the Gas Cylinder form the Marker after use, keep the Marker and the Gas Cylinder out of reach of the children at all time.
- o. Ensure the adjustment of the muzzle energy (joule) of the Marker is within the limit of local laws.
- p. Any injury during usage the Marker or any accessories should go to see Doctor immediately.
- q. DO NOT ATTEMPT to repair the Marker or any accessories of this Marker by yourself, should refer to nearest Authorized Service Center.
 - DO NOT ATTEMPT to strip and assemble the Gas Cylinder or the main core.
 - Ensure the Safety Catch is always at SAFE before or after use
 - DO WEAR appropriate protective dress and mask when using the Marker