TIPPMANN **BASIC PARTS LIST** -98-39 Stock Barrel Front Sight 98-40 Barrel O-Ring Front Sight Spring SL2-4 Front Bolt O-Ring -TA01016 Linkage Arm 02-17 Front Bolt 98-12A Valve/Rear Bolt O-Ring (2) 98-21NR Front **Custom Power Tube** Sight Pin TA05005 Rear Bolt CA-14 02-22 Velocity Screw Plug 98-V Valve Complete Drive 98-05P Spring CA-15 Guide End TA02011 Rear Bolt Cap Pin 98-13 Bolt Handle 98-57 Buffer TA05107 Custom Receiver (Left) O-Ring 98-01A-Receiver Bolt (Short) (5) 98-01B Receiver Bolt (Long)(1)-TA02007 Name Plate -98-07R Front Grip (Right) 98-07L Front Grip (Left)-INTERNAL VALVE PARTS: Valve Disassembly Not Recommendéd 98-25N Valve Body-SL2-25 Valve Seat O-Ring (2) CA-02A PA-31A Valve Snap Ring-Grip Screw (2) 98-56 Valve Plug 98-32 Valve Spring 98-PL Valve Plunger TA05003 CA-27 Front Valve Seat Split Grip (Left) 98-33 CA-36 TA02036 02-35 98-20 Pins Trigger Spring (Yellow) Sear TRIGGER ASSEMBLY Sear Sear Pin Spring 1) Place 4 dowel pins and (Black)

98-20 98-33 CA-36 IA02036 02-35 Trigger Pins Sear Sear Sear Spring (4) Pin Spring (98-36) 98-18 Slider (yellow spring not visible 98-36A 4)

Trigger_

98-38 Trigger Guard

- Place 4 dowel pins and
 black sear pin into locations as shown.
- 2) Then place the trigger and sear onto pins as shown.
- 3) Insert sear spring as shown.
- 4) Insert trigger spring (yellow) as shown.



WARNING

DO NOT DISASSEMBLE THIS MARKER WHILE IT IS PRESSURIZED WITH AIR. DO NOT PRESSURIZE A PARTIALLY ASSEMBLED MARKER.

